


## Instructions for: **BAN12** *Acid Eater Battery Acid Neutralizer & Degreaser*

Liberal spray the battery including the terminals, cables and battery casing with Acid Eater™ Neutralizer & Degreaser. Wipe with a cloth, rinse with water or allow the battery to air dry.

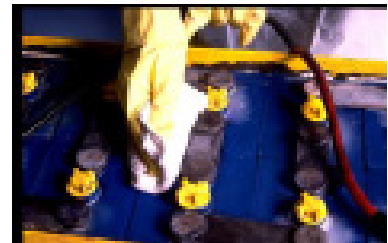

It will change colors in the presence of acid and will change to a different color when neutralized.



Wipe with a cloth, rinse with water or allow the battery to air dry.



Spray the battery casing and wipe with a cloth, rinse with water or allow the battery to air dry.



**Battery Stations:** Liberal apply by spraying on the rollers, stands and racks. Agitate with a brush and wipe clean with a cloth, rinse with water or allow to air dry.

**Concrete Floors:** Apply liberally by spraying on concrete floors and agitate with brush and allow product to remain on floors undisturbed for a few minutes before rinsing.

