

## Installing a Hurdle Bracket Style Containment Berm


### Instructions:

**Step 1:** Unfold the berm

**Step 2:** Lay the brackets on the sides of the berm

**Step 3:** Place a hurdle bracket in each corner and lift the berm while inserting the edge of the hurdle bracket in the envelope. The hurdle should go underneath the berm.

**Step 4:** Fill in each pocket with a hurdle bracket.

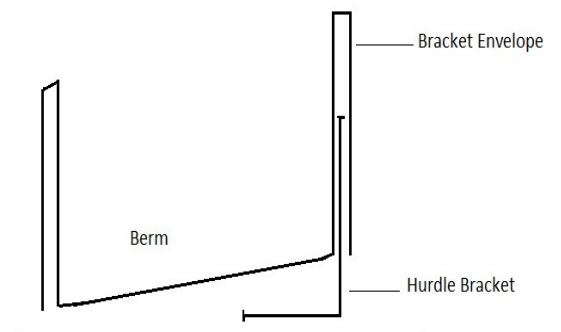

If using as a drive-in berm, place brackets around 3 sides, leaving the wall of the 4th side down. The 4th wall should be a “short side” wall. Drive vehicle into the berm (it is recommended that you use Track Guards for this movement). Once inside, complete the bracketing of the 4th wall.



If you are using a **Ground Cover**, it should be placed between the ground and the berm. It is best to lay the Ground Cover out flat before unfolding the berm.

**Track Guards** should be placed inside the berm after the 3 initial walls have been set up. Track Guards should run parallel to the “long side” of the berm.

