

## Pipe Leak Diverter Instructions

Just follow these simple steps to ensure your Pipe Leak Diverter is properly secured & connected

*We suggest hanging the unit prior to attaching the hose assembly*

### SECURE YOUR PIPE LEAK DIVERTER:

**Step 1:** Determine which structure you should hang the Pipe Leak Diverter from in the leaking area.


**Step 2:** Use grommets and included straps at the four corners of the Pipe Leak Diverter to hang the unit.

**Step 3:** Make sure the unit is as level as possible to create proper drainage.


**Step 4:** See instructions below on how to attach the hose assembly




### ATTACH THE HOSE ASSEMBLY:

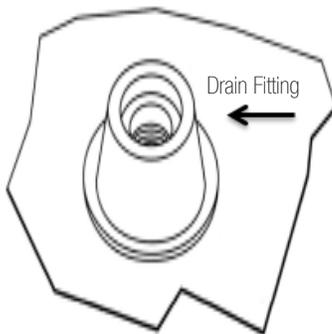


**Step 1:**  
Find the clear drain fitting located in the center of the unit.  
(It is likely that it will be in an inverted position)

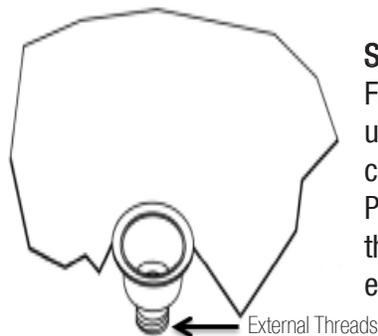

**Step 2:**  
From the underside of the unit, insert a finger into the center of the fitting.  
Pull outward on the inside of the fitting until you see the external threads.

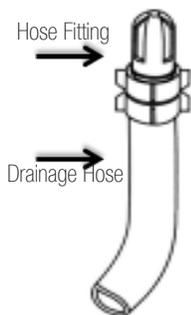

**Step 3:**  
Attach a 3/4" drainage hose to the hose fitting  
(drainage hose is available separately, Item# LDHOSE)

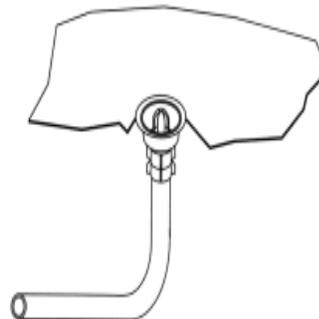

**Step 4:**  
Attach the hose assembly (hose fitting + 3/4" drainage hose) to the external threads on the drain fitting