


Containment Boom #C-BOOM24-50 - 8" Float / 16" Skirt 50'/section

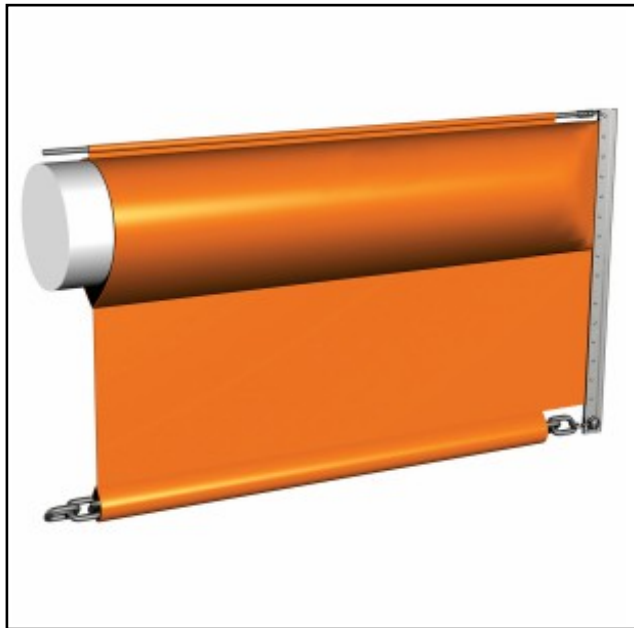

Quickly confine spills, ice and debris on fast, choppy waters. Our heavy-duty non-absorbent Boom floats to keep oil from spreading into or out of a contained area while the skirt hangs below the surface to help prevent spills from creeping underneath.

- Internal foam float forms a barrier against oil, ice, flotsam and debris above the surface; tension cable adds strength and rigidity
- Flexible PVC skirt hangs below surface to keep pollutants from escaping; ballast chain adds weight to help keep skirt taut
- Extra-heavy hinge points provide stability, float integrity and durability in rough wave conditions; connect Booms together to form any length
- Quick and easy to deploy, even using a small boat with outboard motor
- Rugged, heavy-duty Boom is ideal in rivers, docks, bays, creeks, large lakes, coastal areas, API separators, harbors and other areas with fast, choppy flow

C-BOOM24-50 Specifications

Dimensions:	50' L x 24" H
Shipping Dimensions:	60" W x 60" L x 70" H
Sold as:	1 per package
Color:	Orange
Composition:	22oz PVC Fabric
Weight:	138 lbs.
# per Pallet:	12
Incinerable:	No
Ship Class:	100

Metric Equivalent Specifications

Dimensions:	15m L x 61cm H
Shipping Dimensions:	152.4cm W x 152.4cm L x 177.8cm H
Weight:	62.6 kg

C-BOOM24-50 Technical Information

Warnings & Restrictions:

There are no known warnings and restrictions for this product.

Regulations and Compliance:

40 CFR 112.7(c)(1) - Facilities must have "appropriate containment and/or diversionary structures to prevent discharge oil from reaching a navigable water course."

33 CFR 154.1047(c)(2) - Concerning navigation and navigable waters, a facility which handles, stores or transports Group V petroleum oils must identify response plan resources such as containment booms and other methods.

Technical Documents:

(Available at spilltech.com)

Product Data Sheet (PDS)

Chemical Compatibility (CCG)



Online:
spilltech.com

Phone:
1-800-228-3877 (N.Am.)
1-770-475-3877 (Other)

Fax:
1-800-872-3764 (N.Am.)
1-770-410-1812 (Other)

Email:
sales@spilltech.com