

Leak Diverter Instructions

Just follow these simple steps to ensure your Leak Diverter is properly secured & connected

We suggest hanging the unit prior to attaching the hose assembly

SECURE YOUR LEAK DIVERTER:

Step 1: Determine which structure you should hang the Leak Diverter from in the leaking area.


Step 2: Use the included bungee cords along with the grommets on the Leak Diverter to hang the unit.

Step 3: Make sure the unit is as level as possible to create proper drainage.

Step 4: See instructions below on how to attach the hose assembly




ATTACH THE HOSE ASSEMBLY:

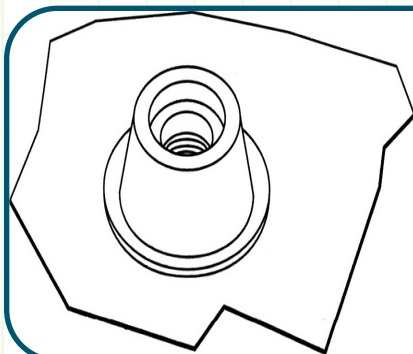


Step 1:
Find the clear drain fitting located in the center of the unit.
(It is likely that it will be in an inverted position)


Hose fitting →

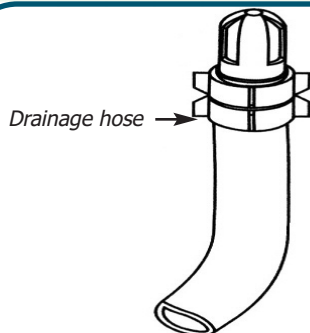

Step 3:
Attach a 3/4" drainage hose to the hose fitting
(drainage hose is not included)

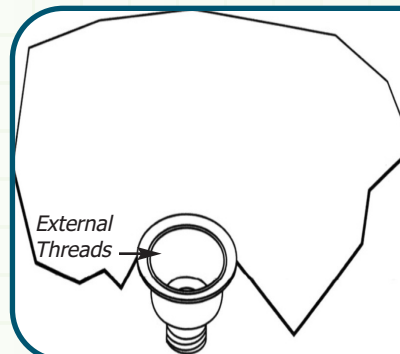

Step 2:
From the underside of the unit, insert a finger into the center of the fitting.
Pull outward on the inside of the fitting until you see the external threads.

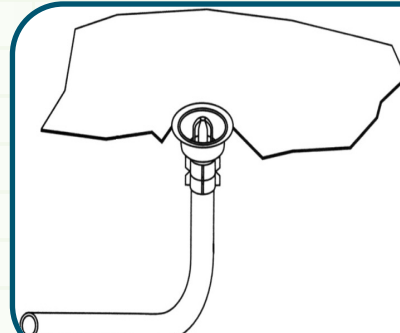

Step 4:
Attach the hose assembly (hose fitting + 3/4" drainage hose) to the external threads on the drain fitting