

Contents List for: R-PIPE-S Repair Kit



Qty	Pkg	Description
1	Each	½" Pipe Patch
1	Each	¾" Pipe Patch
1	Each	1" Pipe Patch
1	Each	1¼" Pipe Patch
1	Each	1½" Pipe Patch
1	Each	2" Pipe Patch
1	Each	2½" Pipe Patch
1	Each	3" Pipe Patch
1	Each	3½" Pipe Patch
1	Each	4" Pipe Patch
1	Each	18" x 22" Extra Foam
1	Each	8" x 12" Extra Rubber
1	Each	Tool Kit
1	Each	Carrying Case

Instructions for: R-PIPE-L & R-PIPE-S Repair Kits


Identify and know the chemical you are working with and its compatibility with the materials used in this kit:
Stainless Steel, Zinc Plated Steel, SBR Rubber, Neoprene Closed Cell Foam

Proper protective clothing must be worn at all times!



Set Up

- 1.) Determine size of pipe & select proper patch
- 2.) If possible, apply patch to side of and tighten bolts slightly
- 3.) Select proper sized socket

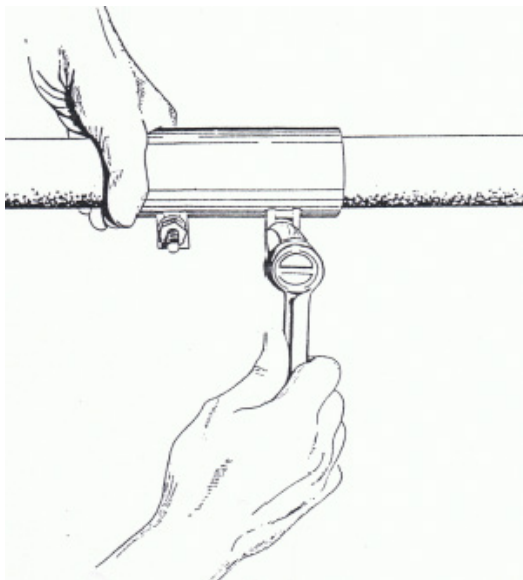

Patching Pipe

- 1.) Slide patch over leak and tighten

You will find additional soft and hard neoprene materials included in this kit for odd sized pipes, jagged edge leaks or wherever you may need it!