


## Containment Boom #C-BOOM24-100 - 8" Float / 16" Skirt 100'/section

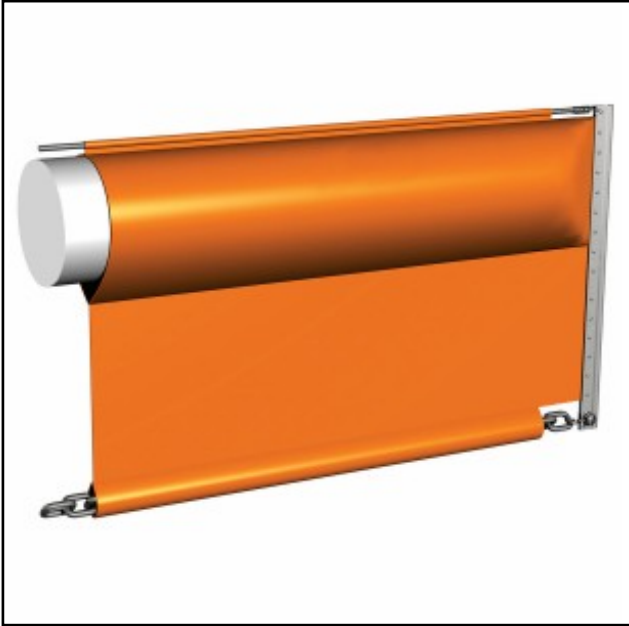

Quickly confine spills, ice and debris on fast, choppy waters. Our heavy-duty non-absorbent Boom floats to keep oil from spreading into or out of a contained area while the skirt hangs below the surface to help prevent spills from creeping underneath.

- Internal foam float forms a barrier against oil, ice, flotsam and debris above the surface; tension cable adds strength and rigidity
- Flexible PVC skirt hangs below surface to keep pollutants from escaping; ballast chain adds weight to help keep skirt taut
- Extra-heavy hinge points provide stability, float integrity and durability in rough wave conditions; connect Booms together to form any length
- Quick and easy to deploy, even using a small boat with outboard motor
- Rugged, heavy-duty Boom is ideal in rivers, docks, bays, creeks, large lakes, coastal areas, API separators, harbors and other areas with fast, choppy flow

### C-BOOM24-100 Specifications

<b>Dimensions:</b>	100' L x 24" H
<b>Shipping</b>	60" W x 60" L x 70" H
<b>Dimensions:</b>	
<b>Sold as:</b>	1 per package
<b>Color:</b>	Orange
<b>Composition:</b>	22oz PVC Fabric
<b>Weight:</b>	276 lbs.
<b># per Pallet:</b>	6
<b>Incinerable:</b>	No
<b>Ship Class:</b>	100

### Metric Equivalent Specifications

<b>Dimensions:</b>	30m L x 61cm H
<b>Shipping</b>	152.4cm W x 152.4cm L x 177.8cm H
<b>Dimensions:</b>	
<b>Weight:</b>	125.2 kg

## C-BOOM24-100 Technical Information

### Warnings & Restrictions:

There are no known warnings and restrictions for this product.

### Regulations and Compliance:

40 CFR 112.7(c)(1) - Facilities must have "appropriate containment and/or diversionary structures to prevent discharge oil from reaching a navigable water course."

33 CFR 154.1047(c)(2) - Concerning navigation and navigable waters, a facility which handles, stores or transports Group V petroleum oils must identify response plan resources such as containment booms and other methods.

### Technical Documents:

(Available at [spilltech.com](http://spilltech.com))

Product Data Sheet (PDS)

Chemical Compatibility (CCG)



**SpillTech**

Online:  
[spilltech.com](http://spilltech.com)

Phone:  
**1-800-228-3877 (N.Am.)**  
**1-770-475-3877 (Other)**

Fax:  
**1-800-872-3764 (N.Am.)**  
**1-770-410-1812 (Other)**

Email:  
[sales@spilltech.com](mailto:sales@spilltech.com)