


4-Drum In-Line Spill Nest #SPAL4-IN - 107.75" x 32.25" x , 1 each/package

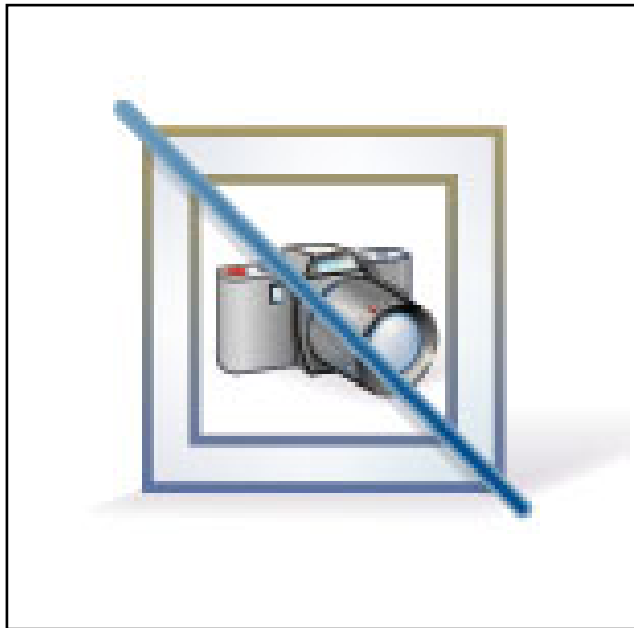

A SpillPal unit with flexible sidewalls provides quick, portable spill containment — a great alternative to hard poly pallets that must be moved with a forklift.

- Inline design is ideal for containment along walls or in narrow areas without ample floor space for square decks
- Provides versatile, portable spill control during temporary storage of drums, machine parts, tanks and generators
- Can also be used as a washdown pad or pumping station
- Light, foam sidewalls spring back to their original shape after any pressure is applied; safe for drive-overs from handtrucks or forklifts
- Affordable, portable and easy to set up
- Reusable containment can be folded and stored to save floor space
- No ramps or other accessories are required for usage
- To help keep items out of contained liquids, optional grates can be added (grates not included, use one grate per every two drums; do not drive over SpillPal when grates are in place)
- Resists most chemicals; check your specific chemical compatibility under "Technical Resources" at spilltech.com
- Available in multiple configurations

SPAL4-IN Specifications

Dimensions:	32.25" W x 107.75" L
Shipping Dimensions:	31" W x 55" L x 8" H
Sold as:	1 per package
Color:	Yellow
Sump Capacity:	30 gal. per package
Weight:	8 lbs.
# per Pallet:	1
Ship Class:	250

Metric Equivalent Specifications

Dimensions:	81.9cm W x 2.7m L
Shipping Dimensions:	78.7cm W x 139.7cm L x 20.3cm H
Sump Capacity:	113.6 L per package
Weight:	3.6 kg

SPAL4-IN Technical Information

Warnings & Restrictions:

There are no known warnings and restrictions for this product.

Technical Documents:

(Available at spilltech.com)

Product Data Sheet (PDS)



SpillTech

Online:
spilltech.com

Phone:
1-800-228-3877 (N.Am.)
1-770-475-3877 (Other)

Fax:
1-800-872-3764 (N.Am.)
1-770-410-1812 (Other)

Email:
sales@spilltech.com